

INFRARED ASPHALT HEATER

TRACKLESSVEHICLES.COM

ASPHALT REPAIR MADE EASY.

Operation of the Infrared Asphalt Heater is simple: position the attachment over the repair area, activate the tractor PTO, set the cycle time and press the start button. The heat cycle time can be increased or decreased in 2-minute intervals.

The Infrared Asphalt Heater has no open flame; instead, electric elements produce an even and controlled heat that will not burn the surface.

When the Infrared Asphalt Heater is not in use, it can be separated from the Generator frame by simply removing four pins.

CONTACT TRACKLESS TODAY

CALL 519-688-0370
EMAIL info@tracklessvehicles.com
VISIT 55 Thunderbird Drive, PO Box 244,
Courtland ON, Canada N0J 1E0



GENERAL SPECS

HEATING PAN

4' x 6' (1219 mm x 1828 mm)
heating pan area

HEATING ELEMENTS

11 heating elements

GENERATOR OUTPUT

45 KW, 175 amp

RECEPTACLES

110V and 220V receptacles

GENERATOR MAY BE PURCHASED SEPARATELY.

